

P05 to P2 Models

To load: Turn counter-clockwise the wheel to the left.
To download: Press the spring ring to the right.

P03 to P12 Models

To load: Turn clockwise the spindle to the right, with aid of a standard fixed key.
To download: Press the spring ring to the left.

P15 to P120 Models

To load: Turn clockwise the spindle using the hex nut.
To download: Turn counter-clockwise the same spindle.
By using the handle, you can adjust and set the cable length and let it out of the balancer to have the tool within your reach.

P35 to P120 Models

These models have safety systems (Malta's Cross and Reel Lock)
In case of breakage, they lock the system holding the load in position.
They also have a brake system, which allows a slower control of the load return, braking simultaneously the reel in case of breakage.

Model	Capacity (Kg)
P05	From 0,0 to 0,6 Kg
P1	From 0,0 to 1 Kg
P2	From 0,5 to 2 Kg
P3	From 1 to 3 Kg
P5	From 2 to 5 Kg
P8	From 4 to 8 Kg
P10	From 7 to 10 Kg
P12	From 9 to 12 Kg
P15	From 11 to 18 Kg
P20	From 17 to 23 Kg
P25	From 22 to 28 Kg
P30	From 27 to 34 Kg
P35	From 32 to 38 Kg
P40	From 36 to 43 Kg
P45	From 42 to 49 Kg
P50	From 47 to 54 Kg
P55	From 52 to 58 Kg
P60	From 56 to 65 Kg
P70	From 64 to 76 Kg
P80	From 72 to 86 Kg
P90	From 82 to 96 Kg
P100	From 94 to 108 Kg
P110	From 104 to 116 Kg
P120	From 112 to 132 Kg

